


Operating instructions Magnetic-inductive flow sensor

efector300°

SM7050

UK



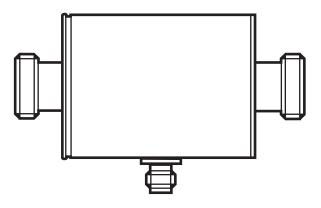

# **Contents**

1 Preliminary note	3
1 Preliminary note	3
2 Safety instructions	3
3 Functions and features	4
4 Installation	4
4.1 Installation location	4
4.2 Installation in pipes	7
4.3 Protection against high medium temperatures	
5 Electrical connection	8
6 Operation	9
6.1 General operating conditions	9
7 Scale drawing	9
8 Technical data	10

### 1 Preliminary note

#### 1.1 Symbols used

- Instruction
- > Reaction, result
- [...] Designation of buttons, switches or indications
- → Cross-reference
- Important note

Non-compliance can result in malfunctions or interference.

# 2 Safety instructions

- Please read this document prior to installing the unit. Ensure that the product is suitable for your application without any restrictions.
- Improper or non-intended use may lead to malfunctions of the unit or to unwanted effects in your application. That is why installation, electrical connection, set-up, operation and maintenance of the unit must be carried out by qualified personnel authorised by the plant operator.
- In all applications test the compatibility of the product materials (→ 8 Technical data) with the media to be measured.

For the scope of validity cULus:


The device shall be supplied from an isolating transformer having a secondary Listed fuse rated either

- a) max 5 amps for voltages 0~20 Vrms (0~28.3 Vp) or
- b) 100/Vp for voltages of 20~30 Vrms (28.3~42.4 Vp).

#### 3 Functions and features

The unit monitors liquids.

It detects the volumetric flow and generates an and converts it into an analogue output signal (4...20 mA).

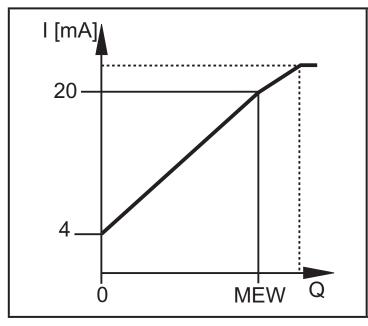

MEW = final value of the measuring range  $(= 50 \text{ l/min} / 3 \text{ m}^3/\text{h})$ :

(= 13.2 gpm / 792.5 gph).

In the measuring range the output signal is between 4 and 20 mA.

It is also indicated:

Volumetric flow above the measuring range: output signal > 20 mA.

#### **Application area**


Conductive liquids with the following properties:

- conductivity: ≥ 20 µS/cm
- viscosity: < 70 mm<sup>2</sup>/s at 40 °C
- flow rate 0...50 l/min; 0...3 m<sup>3</sup>/h; 0...13.2 gpm; 0...792.5 gph.

### 4 Installation


#### 4.1 Installation location

- ▶ Install the unit so that the measuring pipe is always completely filled.
- ➤ Arrange for inlet and outlet pipe lengths. Disturbances caused by bends, valves, reductions, etc. are compensated for. It applies in particular: no shut-off and control devices are allowed directly in front of the unit.

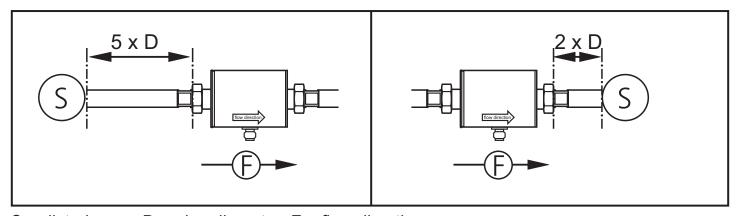


S = disturbance; D = pipe diameter; F = flow direction

► Install in front of or in a rising pipe.

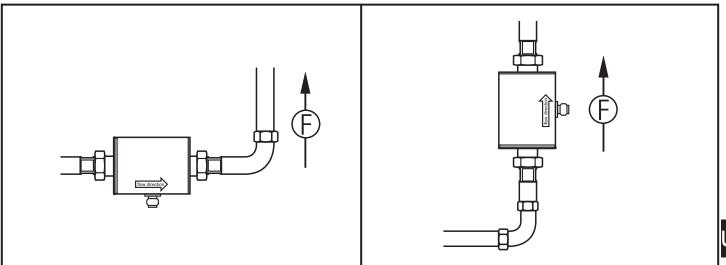


F = flow direction

- ► Avoid the following installation locations:
- Directly in front of a falling pipe.
- In a falling pipe.

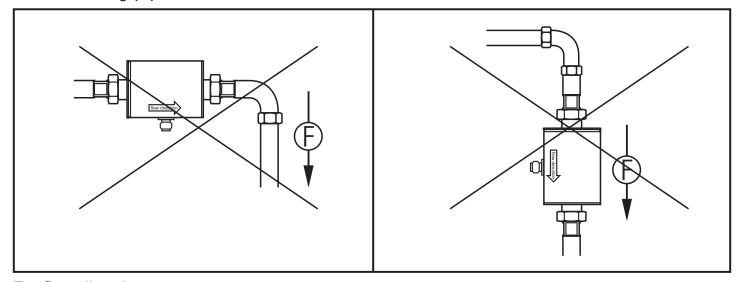

F = flow direction


- At the highest point of the pipe system.
- Directly in front of the spout of a pipe.

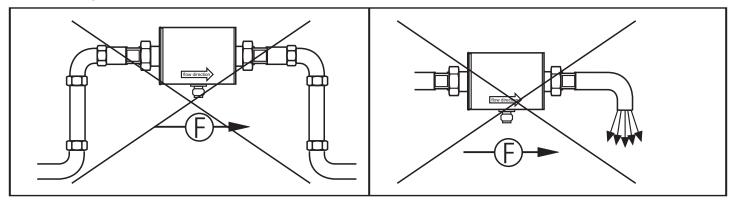

F = flow direction


The unit can be installed independently of the orientation if the following is ensured:

- No air bubbles can form in the pipe system.
- The pipes are always completely filled.
- On the suction side of a pump.

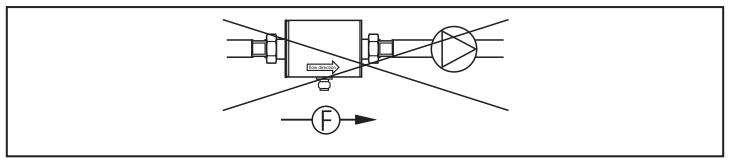

F = flow direction

If installed in an ungrounded pipe system (e.g. plastic pipes) the unit must be grounded.

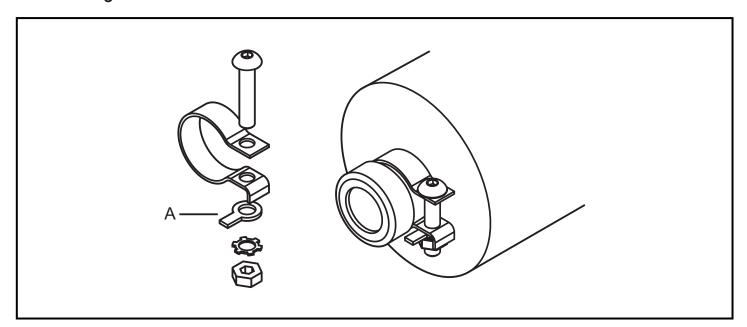


Ground brackets for the  $G^{3}/4$  thread are available as accessories (order number E40197). A = cable lug (not included in the scope of supply).

#### 4.2 Installation in pipes

The unit is installed in the pipe using adapters. Adapters have to be ordered separately as accessories.

- Order no. E40178: 2 adapters for R½ pipes + 2 seals.
- Order no. E40191: 2 adapters for ½" NPT pipes + 2 seals.

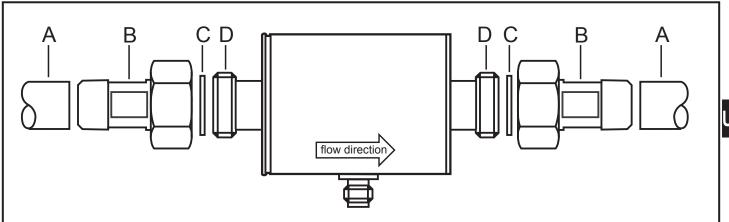

- 1. Screw the adapter (B) into the pipe (A).
- 2. Place the seals (C) and install the unit according to the marked flow direction.
- 3. Screw the adapter (B) with the threads (D) until it is hand-tight.
- 4. Tighten the two adapters in opposite direction (tightening torque: 30 Nm).

After installation air bubbles in the system can affect the measurement. Help:

Rinse the system after installation for ventilation (rinsing quantity > 3 l/min / 1 gpm).

In cases of horizontal installation: As a result of design requirements a small quantity of the medium always remains in the measuring channel after switching off the pump.

### 4.3 Protection against high medium temperatures

For medium temperatures over 50 °C some parts of the housing can heat up to over 65 °C.

▶ Protect the housing against contact with flammable substances and unintentional contact.

## 5 Electrical connection


!

The unit must be connected by a qualified electrician.

The national and international regulations for the installation of electrical equipment must be adhered to.

Voltage supply to EN50178, SELV, PELV.

- ▶ Disconnect power.
- ► Connect the unit as follows:

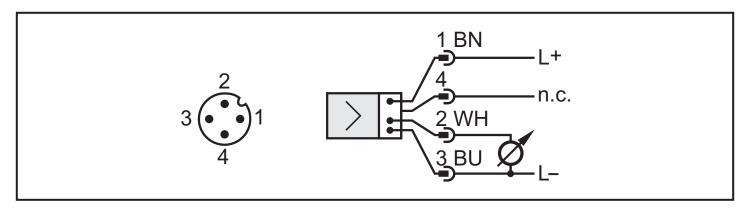

For information about available sockets/connectors see:

www.ifm.com  $\rightarrow$  Products  $\rightarrow$  Accessories


# 6 Operation

After power on and expiry of the power-on delay time (approx. 5 s) the unit is in the Run mode (= normal operating mode). It carries out its measurement and evaluation functions and generates an analogue output signal.

### 6.1 General operating conditions

- ► Avoid deposits, accumulated gas and air in the pipe system.
- For medium temperatures over 50 °C some parts of the housing can heat up to over 65 °C.
- ► In this case do not touch the unit.
- ► Protect the housing against contact with flammable substances and unintentional contact.

# 7 Scale drawing

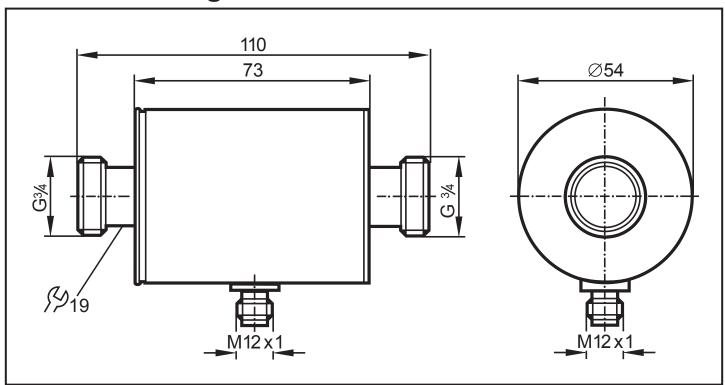

# 8 Technical data

Application		
Operating voltage [V]		
Flow monitoring  Measuring range [l/min / m³/h]		
dP [mbar]		
200 150 100		
50		
0 10 20 30 40 50 60 Q [l/min]		

	1060 -1070
	16
Material (wetted parts)	stainless steel (316S12); PEEK; FKM
Housing materials	stainless steel (316S12);
	PBT-GF 20; PC (Makrolon); EPDM/X (Santoprene)
Protection	IP 67 / III
Insulation resistance [MΩ]	> 100 (500 V DC)
Shock resistance [g]	
Vibration resistance [g]	5 (DIN / IEC 68-2-6, 55 - 2000 Hz)
EMC	
IEC 1000/4/2 ESD:	4 / 8 KV
	10 V/m
	2 KV
IEC 1000/4/5 Surge:	0.5 / 1 KV
IEC 1000/4/6 HF conducted:	10 V

<sup>1)</sup> to EN50178, SELV, PELV

MV = measured value; VMR = final value of the measuring range

### More information at www.ifm.com