

Operating instructions Ultrasonic diffuse reflective sensors

UG-UGA UK





1 Preliminary note

1.1 Symbols used

- Instructions
- > Reaction, result
- → Cross-reference
- Important note

Non-compliance may result in malfunction or interference.

ព្រាល់ Information Supplementary note.


2 Safety instructions

 Installation, electrical connection, set-up, operation and maintenance of the unit must be carried out by qualified personnel authorised by the machine operator.

3 Functions and features

Ultrasonic sensors detect objects of various materials without any contact. Depending on the selected sensor, detected objects are signalled via switching outputs or their distance is indicated by means of a proportional analogue signal.

4 Installation

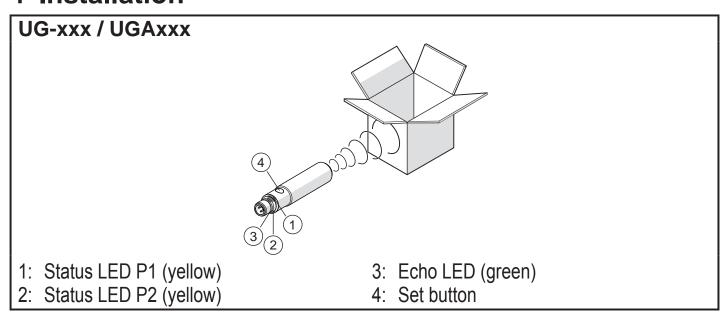


- ▶ Position object.
- ► Align the ultrasonic sensor so that it directly faces the object or the background and secure it to a bracket.
- Object / background is detected when the echo LED (green) lights.

- Sound-absorbing surfaces have a negative effect on a reliable function.
- During installation of the device, consider the blind zone.

5 Electrical connection

- ▶ Disconnect power.
- ► Connect device (depending on the type selected):

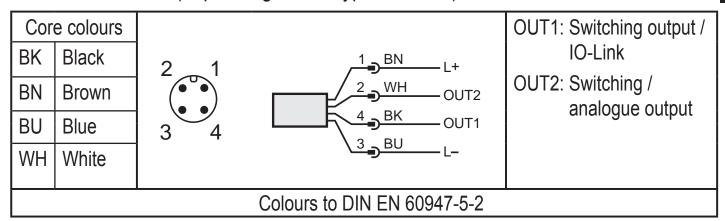

Technical data and further information at → www.ifm.com

6 Set-up


Note the LED behaviour for the set-up:

Echo LED green		
On	Echo is received.	
Off	No echo (object / background not detected).	
Off	For the time of resetting to factory setting.	

Status LEDs yellow					
	LED 1	LED 2	Function acknowledgement		
Flashes 1 Hz	Х	Х	Programming mode active.		
Flashes 2.5 Hz	Х	Х	Setting distance P1 completed.		
Flashes 4 Hz	Х	Х	Setting distance P2 completed or assignment acknowledgement of the setting.		
Flashes 10 Hz	Х	Х	Inverting the switching characteristics.		

7 Settings

 
- ► Start programming mode of the device.
- ► Press button 2 s...6 s.
- > LEDs flash (1 Hz).




- If programming has not been completed successfully, the device returns to the previous setting.
- This unit has an IO-Link communication interface. You will find more detailed information about IO-Link and usage at www.ifm.com.

7.1 Window function, distance P1 > P2

- ▶ Object in position P1.
- ▶ Press button once 1 s.
- > LEDs flash (2.5 Hz).
- ▶ Object in position P2.
- ▶ Press button once 1 s.
- > LEDs flash (4 Hz).

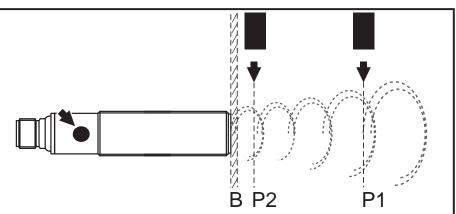

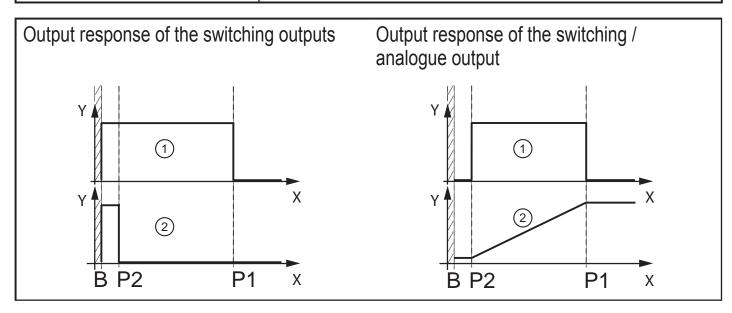

- X: Distance
- Y: Output response
- (1): OUT1 (switching output)
- ②: OUT2 (switching output / analogue output)


B: Blind zone


P1: Setting point 1 (OUT1)

P2: Setting point 2 (OUT2)

7.2 Hysteresis function, distance P1 = P2

- ▶ Object in position P1.
- ▶ Press button once 1 s.
- > LEDs flash (2.5 Hz).
- ▶ Object in position P2.
- ▶ Press button once 1 s.
- > LEDs flash (4 Hz).

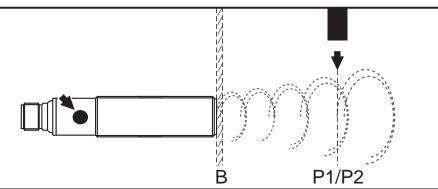

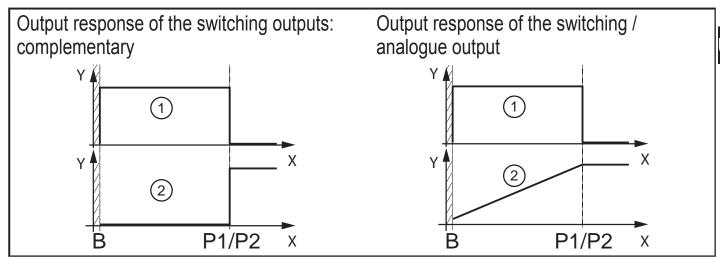

7.3 Inverting the output response

- ► Press button > 6 s.
- > LEDs flash (> 10 Hz).
- > Output functions are inverted (NO becomes NC or vice versa).

7.4 Restore factory setting

- ► Align the device so that no echo is received.
- ► Go into the programming mode of the unit.
- ▶ Press button once for 1 s.
- > LEDs flash shortly with 4 Hz.

8 Operation

- ► Check whether the unit operates correctly.
- > Display by LEDs:

Green LED is lit.	Echo is received.
Yellow LED P1 is lit.	Output 1 is switched.
Yellow LED P2 is lit.	Output 2 is switched.
Green LED flashes.	Short circuit at the output.

!

The minimum distance between the "Proximity Switch Metal Enclosure" and any "External uninsulated live part" shall be at least 12.7 mm.